




DAILY OPERATION

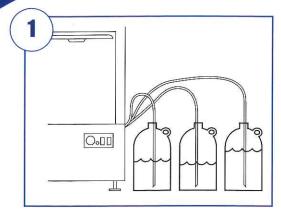


Check chemical levels in containers.

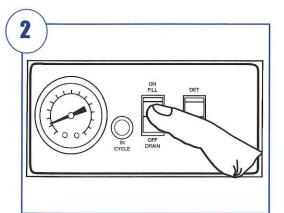


Flip "On-fill/Off-drain" switch to "On-fill" position.

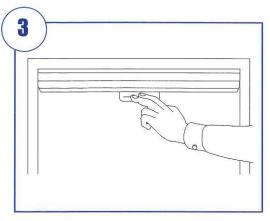


Close and latch door, tank will fill.

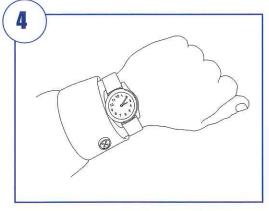


Wait 10 minutes for temperature gauge to read 150°F/66°C.

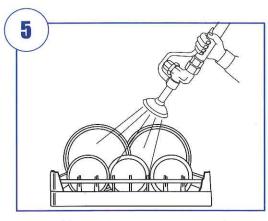


Prescrap wares and load into rack.

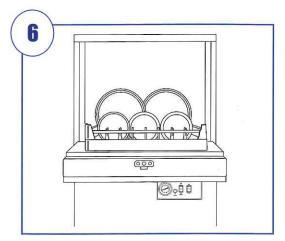


Load rack into dishwasher.

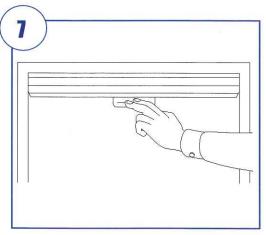

Close and latch door.

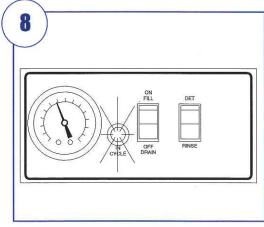

Green in-cycle light comes on.

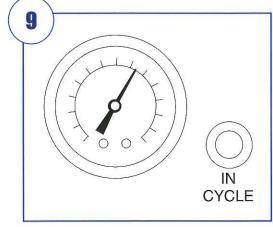

Final rinse temperature should be a minimum of 180°F/82°C during the final rinse. WASH CYCLE IS EXTENDED IF BOOSTER IS NOT UP TO TEMPERATURE.

CYCLE IS COMPLETE
WHEN THE GREEN LIGHT
GOES OUT.

www.diamondproducts.ca • www.hawcoproducts.com

61 SHAVER ST. P.O. BOX 1507 BRANTFORD, ONTARIO N3T 5V6

TEL: 519.759.2443 • FAX: 519.758.0371 DIAMOND SERVICE: 1.866.878.7951